

Smart Metal LED Light
Instruction Manual

NEEWER[®]

About This Manual

Thank you for purchasing **NEEWER**® Metal LED Light.
This Manual applies to both SNL960, SNL1320 and SNL1920
Smart Metal LED Light.

The manual will cover the following:

- the basic operation procedures and functions of the light.
- the application environment and safety use of the light.
- the installation of the accessories of the light.

Table of Contents

 
1.Package Contents	1
2.Applications	2
3.Functions	3
4.Power Supply	6
5.Functions	7
6.Quick-start Guidance	9
7.Control the LED light with the App	10
8.Delete or disconnect a device	13
9.Mount LED Video Light on the Light Stand	14
10.Safety Notes	17
11.Caution	18
12.Product Parameters	18
13.Warranty Policy	19
14.Trademark and Statement	20
15.Contact Us	20

1.Package Contents



Upon receiving the package, please check whether all the items are included. If there is any missing or broken items, please contact Neewer Customer Service (support@neewer.com).


2.Applications

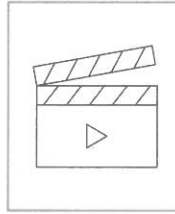


Video Shooting



 Wedding Photography

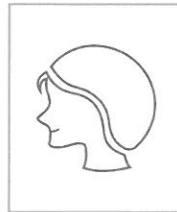


Portrait Photography

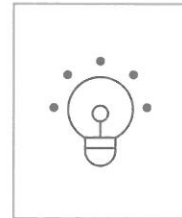 



More Creative
Photography Applications

 3.Functions

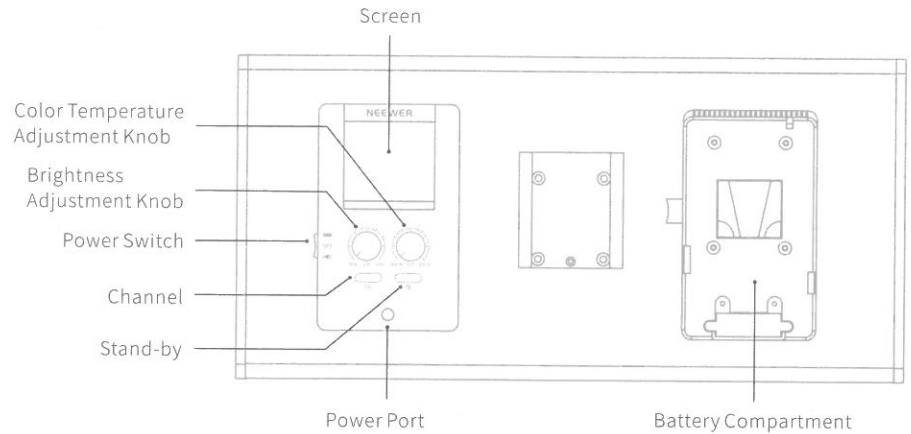


Screen

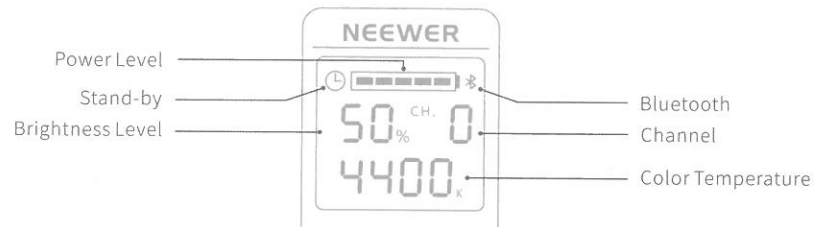 

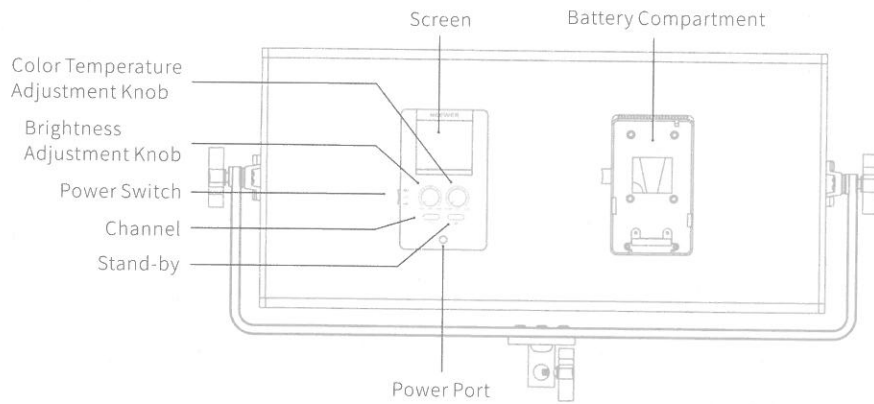 


Screen

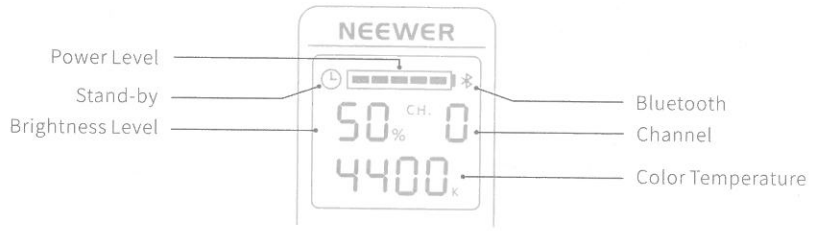 

The introduction of the following functions uses the SNL960 smart metal LED light as example. Please kindly note that the same functions apply to the SNL1320 and SNL1920 model as well. Thank you-

 
NEEWER App Guide

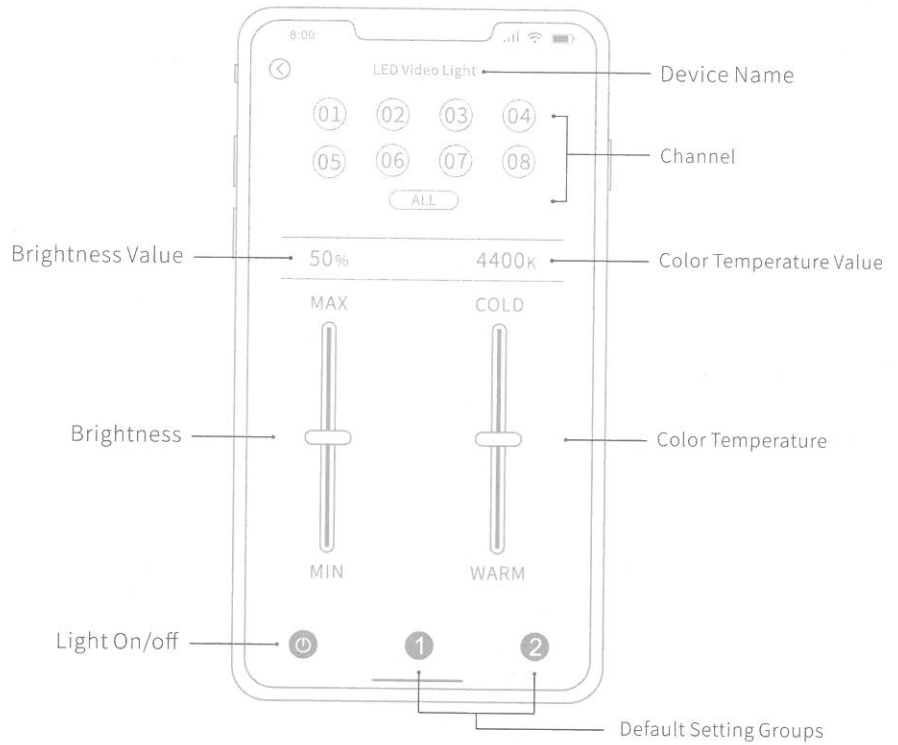


The App can save two groups of default settings. You can choose different group to automatically restore the LED light to the corresponding settings saved under the group.

4. Power Supply

 Via DC adapter

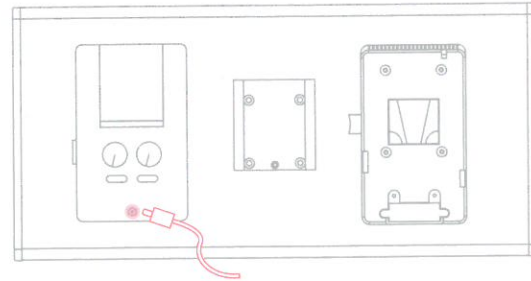

Via batteries

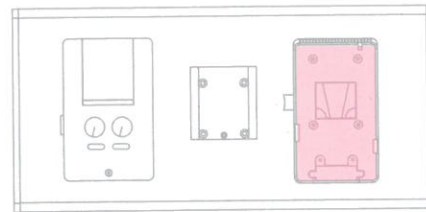 

Battery Compartment Position



Compatible Batteries

5.Functions



Bluetooth

Press the power button to turn on the light. When the Bluetooth symbol "✳" shows flickering on the light's screen, please open the App on your phone to connect with the light.



Channel

Press the power button to turn on the light. Then, press the "CH." button until the icon "CH." starts flashing on the light's screen. At this point, you can rotate the left and right knob on the light to switch channels from Channel 0 to Channel 8.

Note: Channel number "0" on the light serves as backup channel and will only work when the "ALL" button is clicked in the App

⚠ The channel and Bluetooth functions are available on the NEEWER App. You can enter the NEEWER app to control the channel or Bluetooth of lights.



Color Temperature/Brightness

Press the power button to turn on the light. Then you can rotate the "CCT/DIM" knob on the light to adjust color temperature or brightness.



Activate

Quick pressing the Activate Button " \oplus " can turn the light back on when it is in standby mode or make the light enter standby mode when it is on.

6.Quick-start Guidance



Android




IOS

Please scan the QR code on the left to download and install the NEEWER app on your smart phone with Android or iOS system.



①

Download and install the Neewer App on your phone. Then register and/or log in.

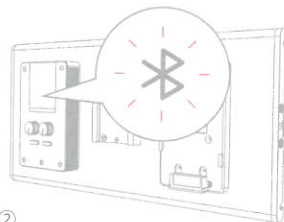


②

Turn on the light and wait until the Bluetooth symbol "⌘" appears on the screen.

③

 Click the "+" symbol on the App to connect your device. When the device is connected, the Bluetooth icon "⌘" will constantly light up, which suggests that the ring light can be controlled on the app.

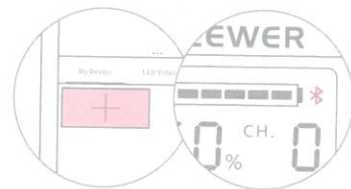

⚠ If the Bluetooth connection fails, the Bluetooth icon will constantly blink to suggest the need to recheck if the device is on.

7. Control the LED light with the App

 
 
Demo: control a single LED light



Turn on the light and press the Channel/Activate button "CH." until the symbol "CH." shows blinking on the screen.




When the "CH." shows blinking, press the DIM knob to adjust the light channel between 0 and 8 (demo: Channel 3).

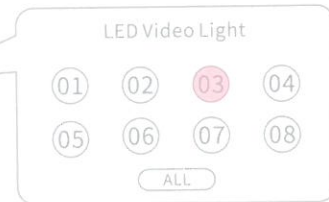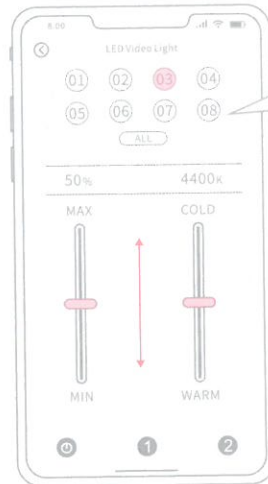


Slide the control bars shown in the left picture to control the LED light.

 
Demo: control multiple LED lights respectively

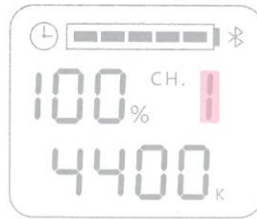


Set the channel of LED light A as any number from 1 to 8 (demo: "1").

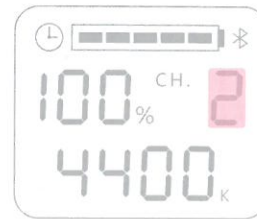

 Set the channel of LED light B as any number from 1 to 8 (demo: "2").

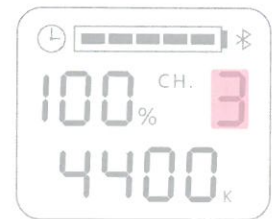

 Set the channel of LED light C as any number from 1 to 8 (demo: "3").

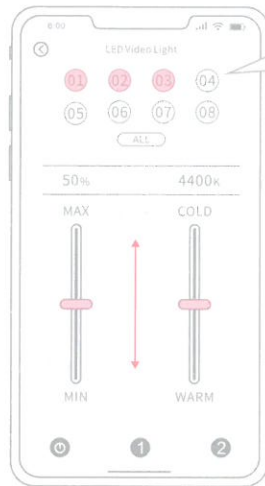


LED Video Light




Choose the channel number (demo:1/2/3) on the App to control the corresponding LED light set in the same channel.


Demo: control multiple LED lights altogether

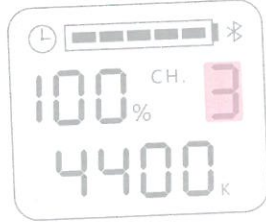


Set the channel of LED light A as any number from 1 to 8 (demo: "3").

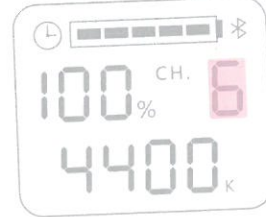

Set the channel of LED light B as any number from 1 to 8 (demo: "6").

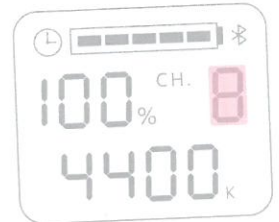

Set the channel of LED light C as any number from 1 to 8 (demo: "8").

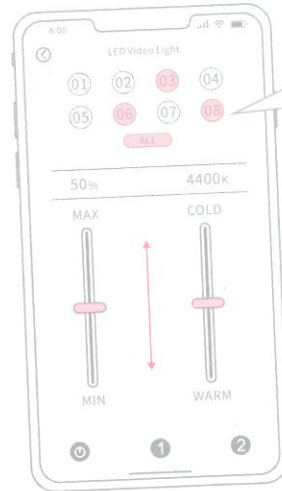


If you click the "ALL" button, all channels will be selected. Then you can control multiple LED lights altogether by sliding the control bars.

8.Delete or disconnect a device

Disconnect a device




 Enter the "NEEWER" App.

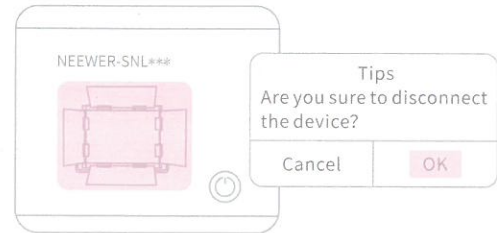


Press the light icon for one second until the confirmation window pops up. Click the "OK" button to disconnect the device.

 Delete a device

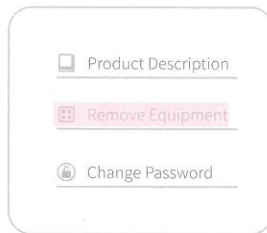


 Enter the "Personal Center" and click "Delete Device".

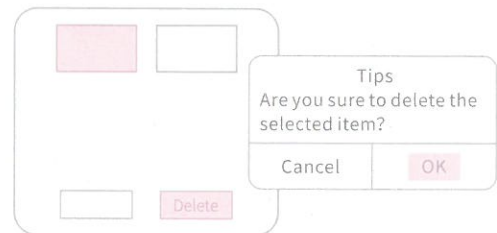


Select the device to be deleted and click "Delete".


9. Mount LED Video Light on the Light Stand

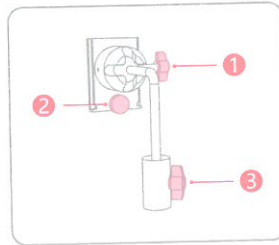

 
- 1 Light Adjustment Lever
- 2 Base Mount Screw
- 3 Stand Connection Knob

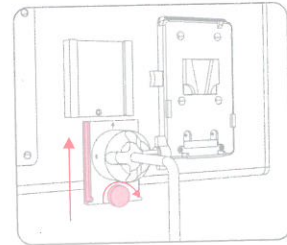

Push the base mount upwards into the square bracket on the back of the light as shown in the picture above. After the mount is fitted, twist clockwise the 2 Base Mount Screw until it is tightened.

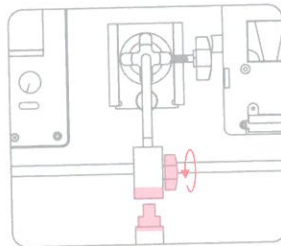


Next, connect the whole base mount to a stand and turn clockwise the 3 Stand Connection Knob until the mount is fixed on the stand.

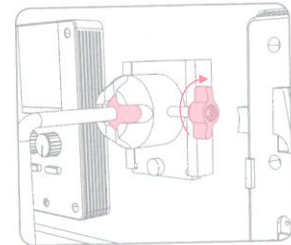


Loosen the 1 Light Adjustment Lever and adjust the light panel to a desired position, then rotate the lever clockwise until it is tightened.

The procedures on this page only apply to the SNL960 and SNL1320 smart metal LED light

Connect the light to a stand and adjust the barndoor

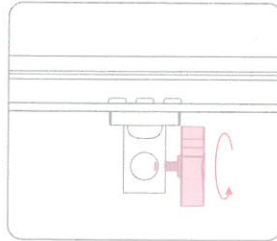


Turn the securing knob of the stand counterclockwise until it is loosened.

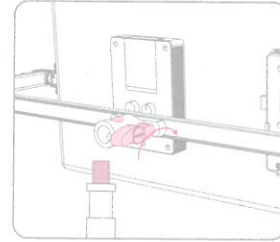


Insert the stand into the connector of the light and turn the securing knob clockwise until it is tight.

 Before mounting the light to the tripod, please make sure that the tripod legs are fully extended, otherwise the light might fall down and cause human injury.

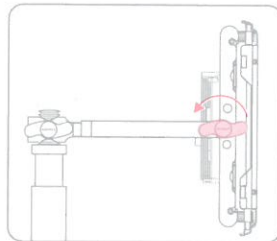

Turn the securing knob on the both sides of the light until the light body is loosened.

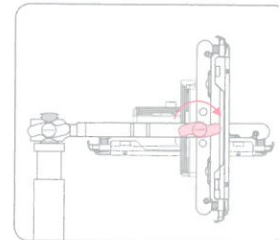

Adjust the light body to your desired position.

The procedures on this page only apply to the SNL1920 smart metal LED light.

10. Safety Notes



⚠ Please do not use the light in the rain or in a humid environment.



⚠ Please put the cables away in case of tripping hazard.



⚠ Please put the cables away in case of tripping hazard.



⚠ Please do not use alcohol or liquids to clean the LED light.

11. Caution

- Please do not stare at the light directly while it is in use, or there might be risk of visual impairment.
- Please do not cover the heat dissipation holes on the product with cloth or other items, or there might be risk of product damage.
- Please do not touch the light with wet hands in case of safety hazard.
- Please do not dismantle or modify the circuit of the item (unless professionally certified).
- Please do not expose the item to the sun for a long time.
- Please turn off the product when it's not in use.
- Failure to comply with the operation procedures and warnings listed in this manual will void the warranty.
- For your Android cellphone, the GPS is required to be turned on first.

12. Product Parameters

Model	SNL960	SNL1320	SNL1920
LED quantity	960	1320	1904
CRI	≥96	≥96	≥96
Lumen (Diffuser included)	0.5M 8100LUX 1M 2600LUX	0.5M 8700LUX 1M 2850LUX	0.5M 9700LUX 1M 3500LUX
Input Voltage	DC15V/4.8A	DC15V/4.8A	DC IN 15/7A
Color Temperature	3200-5600K (±100)	3200-5600K (±100)	3200-5600K (±100)
Power	50W	52W	75W
Size	412*200*50mm	452*200*50mm	572*264*50mm

13.Warranty Policy

Warranty Period

You can register your NEEWER® product for its free 1-year warranty at www.neewer.com.Thanks!

Your questions or suggestion are highly valued and appreciated. Please feel free to contact us, and we will do our best to fully satisfy you.E-MAIL:support@neewer.com

Reminder: Please keep the package box for at least 15 days because it is necessary to use the package box to protect the product during transportation.

Warranty Restrictions

The following conditions are NOT covered by the NEEWER® Warranty:

- (1)The product has expired the one-year warranty period;
- (2)The product is malfunctioned or damaged because the user did not follow the Light to use, adjust, or operate the product;
- (3)The product is malfunctioned or damaged due to rain, hailstorm, fumigation, medicine, chemicals or natural wastage; and due to force majeure (include but not limited to earthquake, Typhoon, fire, flood, violent crime);
- (4)The user modify, dismantle, repair the product and its parts without permission;
- (5)The user damaged the parts of Light by using non-original accessories, or changed the circuit, line configuration without permission;
- (6)The product is malfunctioned or damaged by collision or fall-off due to the user;
- (7)Warranty Card, After-sale Service Card, invoice or item No does not conform to the product;
- (8)An user changes the warranty service date of the product and its parts without permission;
- (9)The panel and main parts are beyond maintenance range; The security label on the product is missing or damaged;
- (10)The Light is used as a commercial product;

14.Trademark and Statement

NEEWER® is a registered trademark of **NEEWER®** Technology Company, Ltd, which is protected by law. **NEEWER®** company reserves all rights for this trademark.

NEEWER® has continuously devoted itself to developing and improving photography and music products. We hold it our mission to pursue excellence and improve customer experience.

15.Contact Us

Please feel free to contact us if you have any problem or advice about the product. Your feedback will be highly valued and our team is sincerely at your service.

✉ Email Address: support@neewer.com (multilanguage service: English, Chinese, German, Spanish, Italian and French)

🗣 After-sale Service: Enter the NEEWER App → Personal Center → Suggestion
→ Complaint Details (Fill in the product model, purchase date, Amazon order number and your feedback) → Submit.

☎ Contact Us: 00 1 732-623-9777
